slick

2 GB
Music & Video Player
MP150-2

User Guide

Made in China / Designed in the USA
Manufactured by: Southern Telecom, Inc. Brooklyn, NY 11232
© 2010 Southern Telecom, Inc. All rights reserved.
Slick is a registered trademark of Southern Telecom, Inc.
www.slickusa.com

In the box

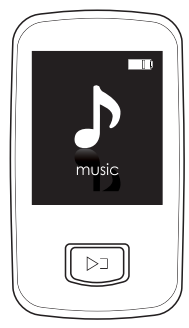

MP3 Player

User Guide

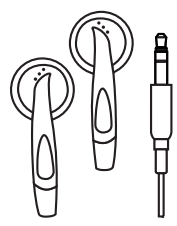
Headphones

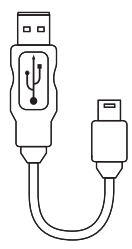
USB Cable

Location of controls

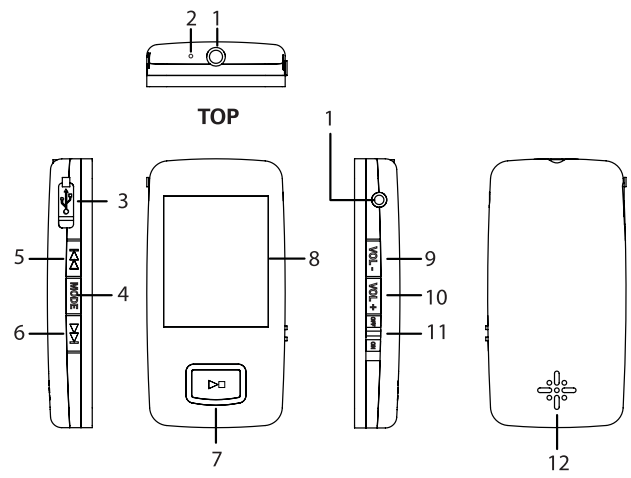

1. 3.5 mm dual headphone jacks (to share music)
2. Microphone
3. USB port
4. **[MODE]** - Select/press & hold for main menu
5. **[⏮]** - Previous track/up (menu list)/fast rewind
6. **[⏭]** - Next track/down (menu list)/fast forward
7. **[▶■]** Power ON/OFF/play/pause/previous screen
8. LCD screen
9. **[VOL –]** - Decrease volume
10. **[VOL +]** - Increase volume
11. **[ON/OFF]** - Power On/Off switch
12. Speaker

Charging

1. Connect the player to your computer using the included USB cable.

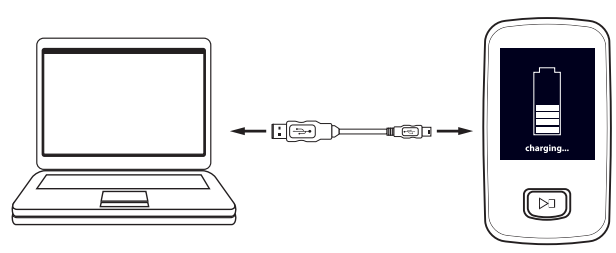

2. Charge the battery between 3-5 hours. Do not charge for more than 8 hours.
3. When the player is disconnected from the computer the Update Screen appears, select "no" and press the **[MODE]** button to avoid the update procedure.

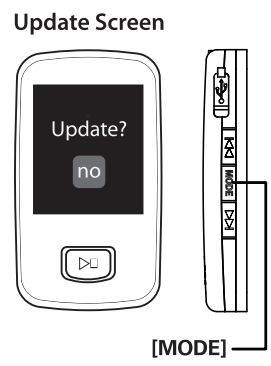

Basic operation

Power on/off

- To turn on the player, make sure the **[ON/OFF]** switch is in the "ON" position and press and HOLD the **[▶■]** button until the display lights up.
- To turn off the player, press and HOLD the **[▶■]** button until the display shuts off, or slide the **[ON/OFF]** switch to the "OFF" position (shutting the player this way is quicker but the last changes in the settings, or last played song will not be saved).

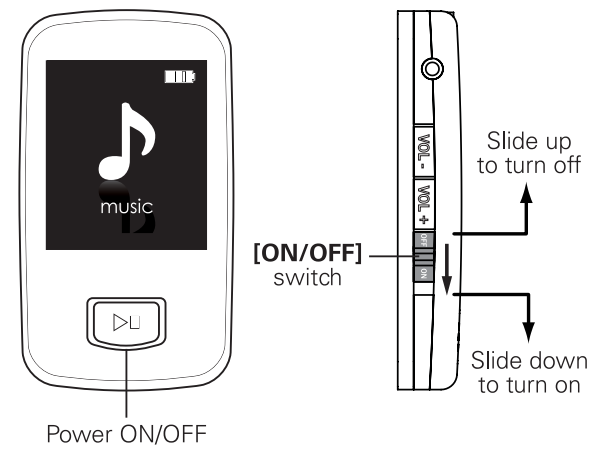

Transferring media files to the player

1. Find music, picture, or video files on your computer.

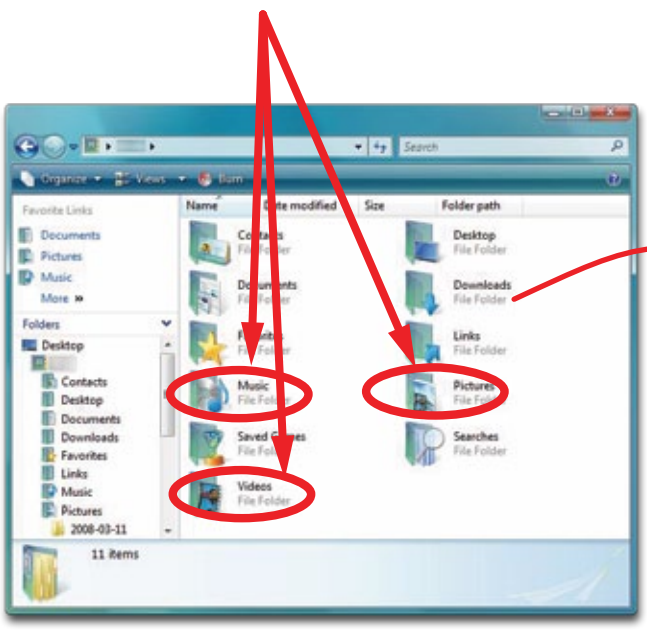

It is also possible to delete files on the player while connected to the computer. Select the file and press the delete key of the computer's keyboard.

*Screenshots above may be slightly different than your computer's operating system.

2. Connect the player to your computer, and locate "MP3".
3. Drag the files into the **"Music"**, **"Pictures"** or **"Videos"** folder.

*** Drag or copy files to the correct folder**

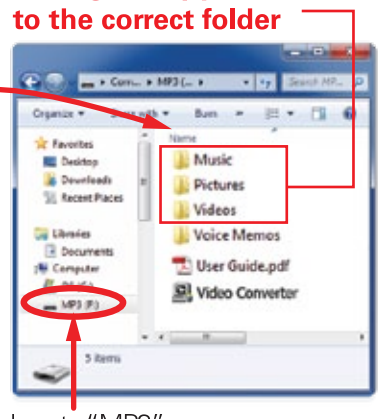

Locate "MP3"

4. After copying files to the player and disconnecting from the computer, the update screen appears.

Update Screen

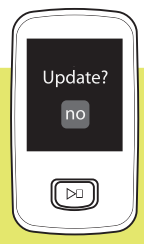

Only select "yes" on the update screen if you are having trouble finding files that you have recently transferred to the player.

The update procedure may take several minutes depending on how much information is on the player.

5. Select "no" and press the **[MODE]** button to go to the main menu.

Converting videos

Before transferring video files to the player, you must convert them to the correct format. Use the Video Converter installed on this player to convert most video files.

1. Connect the player to the computer and locate "MP3".
2. Click "User Guide" to open the video converter instructions.
3. Click "Video Converter" to install the converter on your computer.

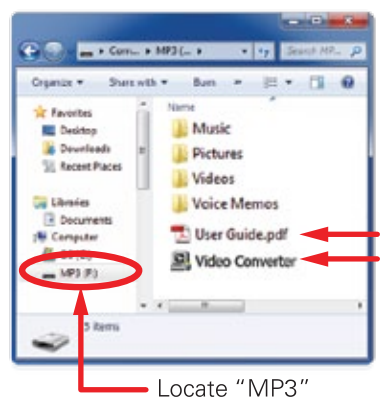

Click "User Guide"
Click "Video Converter"
Locate "MP3"

Some video files may not be supported by the player even after being converted.

Using the player

Navigating the Main Menu

After turning on the player, the main menu appears. Use the **[⏭]** or **[⏮]** button to select an option from the main menu and press the **[MODE]** button.

❶ **[⏭]** next option
❷ **[⏮]** previous option
❸ **[MODE]** • makes a selection
• press and HOLD to return to the main menu
❹ **[▶■]** previous screen

Main Menu

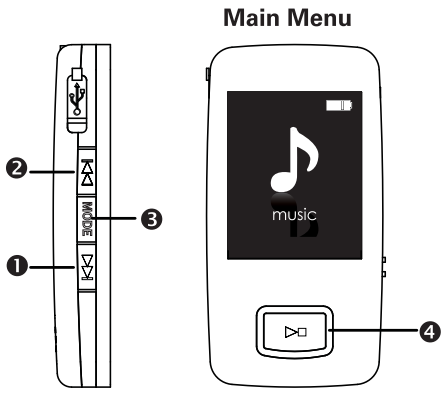

Music

Select "music" from the main menu and press the **[MODE]** button, the Music Menu appears.

Select "Now Playing" to go to the song currently playing *or* select a music file from "All Music", "Artists", Albums", or "My Favorites" and press the **[MODE]** button to enter the Now Playing screen.

Music Menu → Now Playing

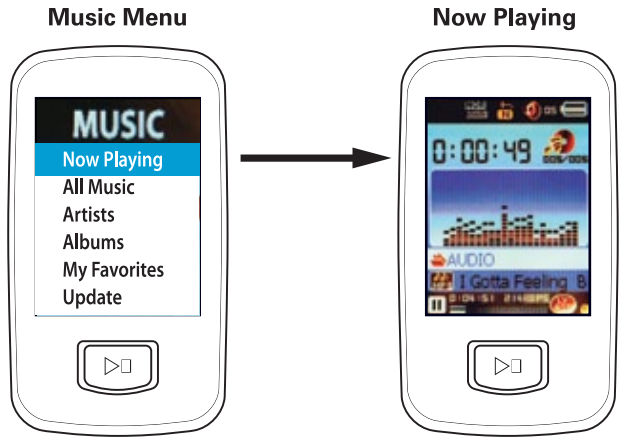

Music Control

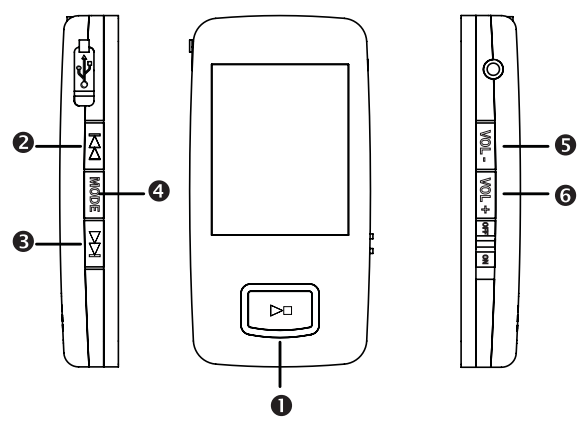

❶ **[▶■]** play/pause music/previous screen
❷ **[⏮]** previous track
❸ **[⏭]** next track
❹ **[MODE]** • access music options 1 & 2
• press and HOLD to return to the main menu
❺ **[VOL –]** - decrease volume
❻ **[VOL +]** - increase volume

Music Options 1
While music is playing, press the **[MODE]** button to access Music Options 1.
Select from the following options:
- Equalizer
- Random / Normal (music playback order)
- Exit

Press the **[MODE]** button to save your selection.

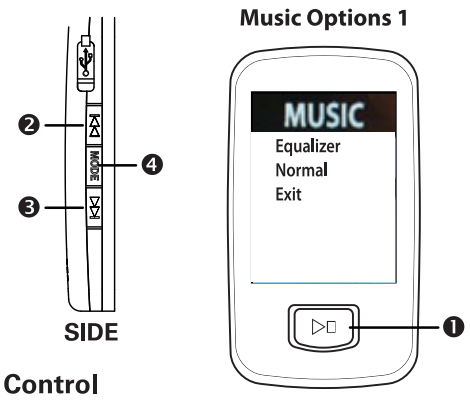

Menu Control
❶ **[▶■]** previous screen
❷ **[I◀◀]** moves the selection up
❸ **[▶▶I]** moves the selection down
❹ **[MODE]** • makes a selection
• press and HOLD to return to the main menu

Music Options 2
While music is paused, press the **[MODE]** button to access Music Options 2.
Select from the following options:
- Local folder (search for music files on the player)
- Delete file
- Delete all
- Add/Delete To Favorites
- Exit

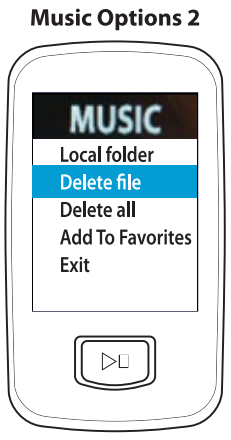

Deleting Files
To delete a file, select "Delete file" or " Delete all", and select the file you wish to delete and press the **[MODE]** button.

Create your own favorite playlist
1. While a song is paused, press the **[MODE]** button to access Music Options 2.
2. Select "Add To Favorites" and press the **[MODE]** button.
3. To listen to songs added to the favorites list, select "My Favorites" from the Music Menu.
4. To delete a song from the favorites list, repeat steps 1 and 2 and select "Delete From Favorites".

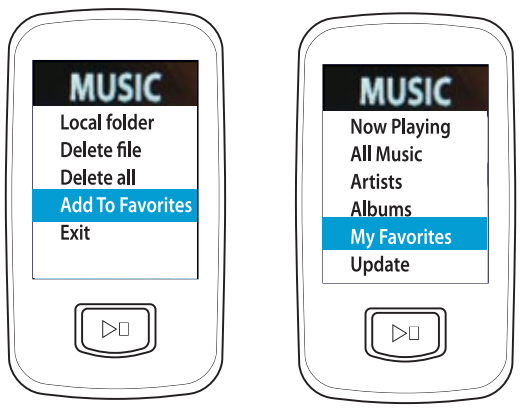

Videos
To watch videos, select "videos" from the main menu and press the **[MODE]** button to enter the video mode.

Use the **[I◀◀]** or **[▶▶I]** button to select a video and press the **[▶■]** button to start playing the selected video.

> Before transferring video files to the player, you must convert them to the correct format. Use the Video Converter installed on this player to convert most video files. Refer to "Converting videos".

Video Control

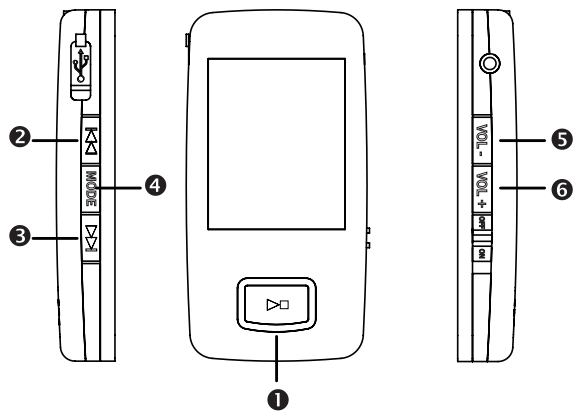

❶ **[▶■]** play/stop video/previous screen
❷ **[I◀◀]** previous video
❸ **[▶▶I]** next video
❹ **[MODE]** • video menu (search/delete video files)
• press and HOLD to return to the main menu
❺ **[VOL –]** - decrease volume
❻ **[VOL +]** - increase volume

Photos
To browse pictures, select "photos" from the main menu and press the **[MODE]** button to enter the photo mode.

Pictures Folder

Use the **[I◀◀]** or **[▶▶I]** button to scroll through the Pictures Folder and select a photo you would like to view, and press the **[▶■]** button.

To view all pictures in slideshow mode, press the **[MODE]** button while in the Pictures Folder to enter Photo Options, and select **"play set"**, then choose **"Auto Play".**

Photo Options

Record
To record voice memos, select "record" from the main menu and press the **[MODE]** button to enter the recording mode.

Press the **[▶■]** button to start recording.

To pause recording, press the **[▶■]** button again.

To save the recording and exit to the main menu, press and HOLD the **[MODE]** button.

[MODE]
Press and HOLD to save voice memos

Voice
To play back recorded voice memos, select "voice" from the main menu and press the **[MODE]** button to enter the voice memos mode.

Use the **[I◀◀]** or **[▶▶I]** button to select a voice memo file in the **"Voice Memos"** folder.

Press the **[▶■]** button to start playing the selected voice memo.

Press and HOLD the **[I◀◀]** or **[▶▶I]** button to fast rewind or fast forward while playing the voice memo.

Press **[MODE]** to access the voice menu where you can delete voice files from the player.

Settings
In the settings menu you can customize various player settings such as power usage, language, display settings and more.

settings mode
main screen

> Adjust the "Backlight Time" and "Power off" options to extend and optimize battery performance.

Troubleshooting

I can't find the music, pictures, or video files I loaded onto the player
- Update the player by selecting "Update" in the music menu.

Can not power on
- The battery may be exhausted, please recharge the battery.

Files can not be transferred to the player
- Check if the driver is installed correctly in the computer by disconnecting and then reconnecting the player to the computer
- Check the connection between the player and PC, and confirm the USB cable is properly connected.

No sound from the headphones
- Please ensure the volume is turned up, and the headphones are properly connected.
- Check if the format of music file is supported by the player.

Can not record
- Check if there is enough memory and battery capacity.

Display is in the wrong language
- Please ensure you selected the correct language from the "Settings" menu.

I cannot display my .jpg files
- Many digital cameras and image editing softwares add hidden data to the .jpg files. This data can prevent the player from loading the images. Try to eliminate them by saving the file with another name.

Legal information / Limited Warranty

FCC Information:
This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Do not attempt to repair or modify this equipment.
Warning: Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
"This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation."

Limited Warranty
In the unlikely event that this product is defective, or does not perform properly, you may within 90 days from your original date of purchase return it to the authorized service center for repair or exchange.

TO OBTAIN WARRANTY SERVICE:
- Provide proof of the date of purchase within the package (Dated bill of sale).
- Prepay all shipping costs to the authorized service center, and remember to insure your return.
- Include a return shipping address (no P.O. Boxes), a telephone contact number, and the defective unit within the package.
- Describe the defect or reason you are returning the product.

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.

The shipping address of the authorized service center is:

Southern Telecom, Inc.
ATTN: Returns Department
14-C 53rd Street
Brooklyn, NY 11232

Warranty service not provided
This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, and unauthorized modification. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

Limitation of Warranty:
• THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED (INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) ARE HEREBY DISCLAIMED. NO VERBAL OR WRITTEN INFORMATION GIVEN BY SOUTHERN TELECOM INC. IT'S AGENTS, OR EMPLOYEES SHALL CREATE A GUARANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY.

• REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. SOUTHERN TELECOM INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF NEW YORK. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.

Some states do not allow the exclusion nor limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.